

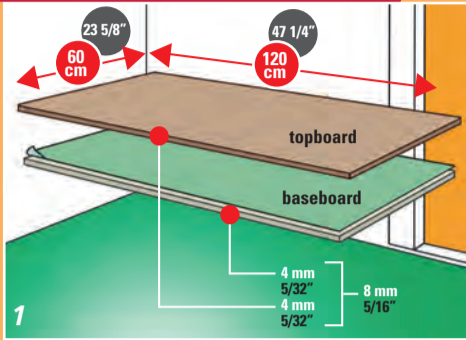
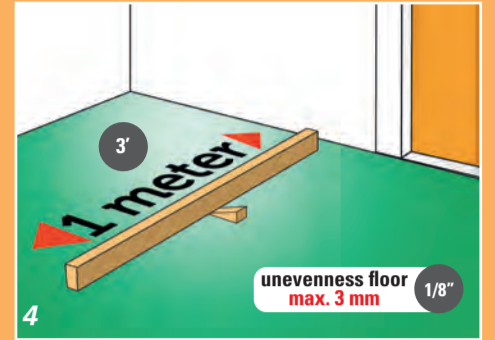


FITTING INSTRUCTIONS


FLOOR PREPARATION

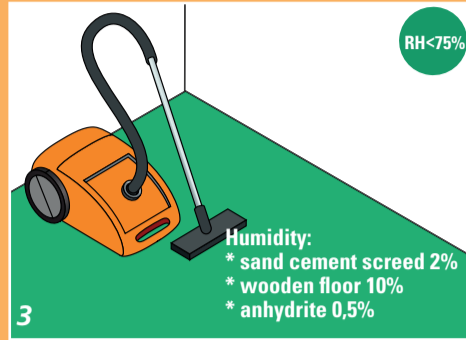


ACCLIMATE 24 HOURS IN ADVANCE

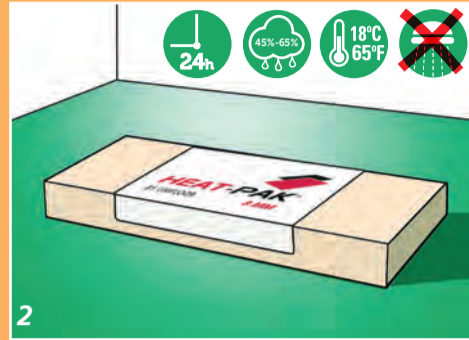


ELECTRICAL FLOOR HEATING

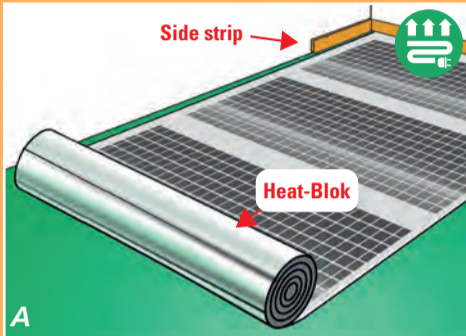


ELECTRICAL FLOOR HEATING

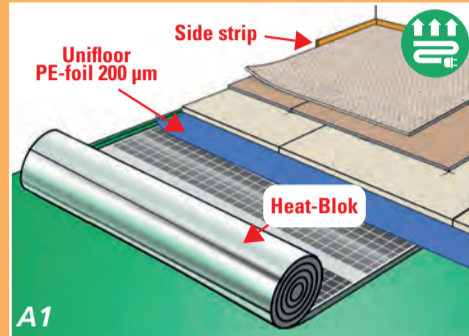














WATER UNDERFLOOR HEATING

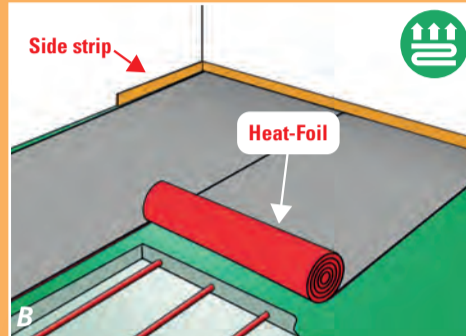



WATER UNDERFLOOR HEATING

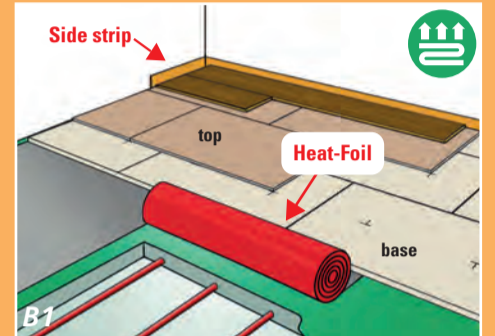

FITTING INSTRUCTIONS

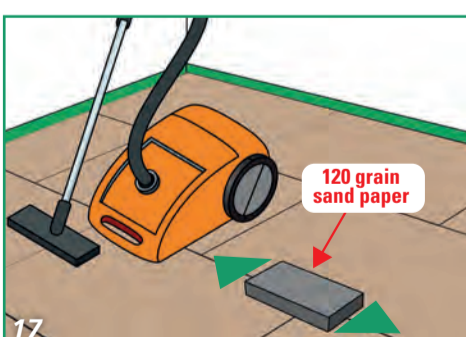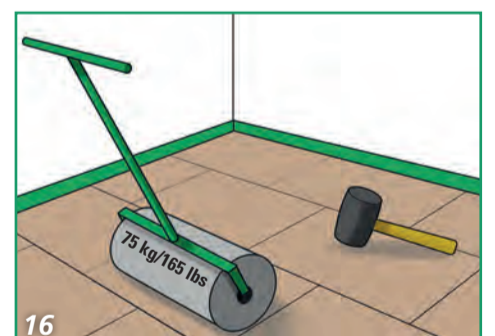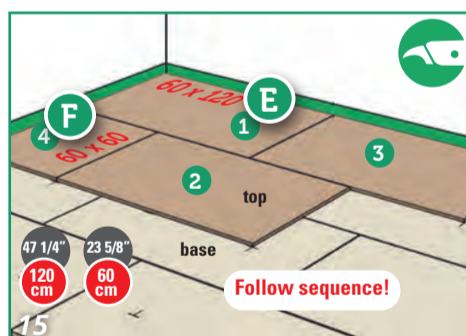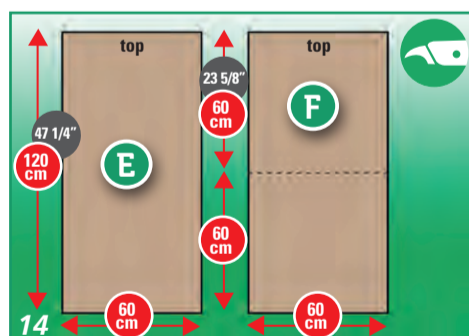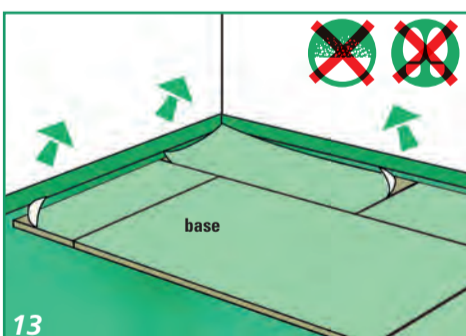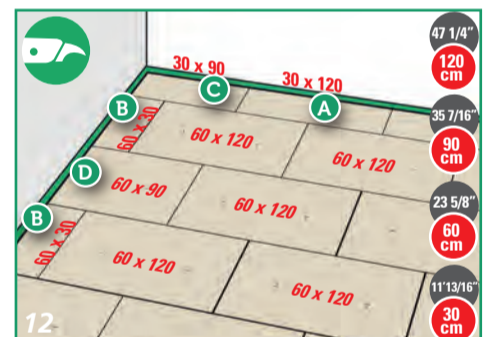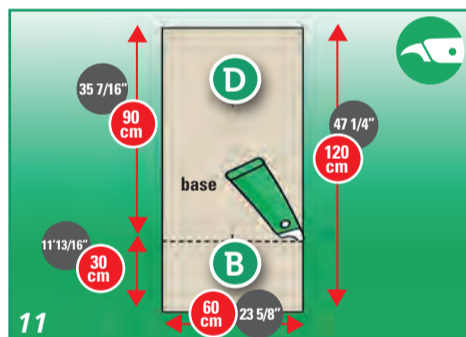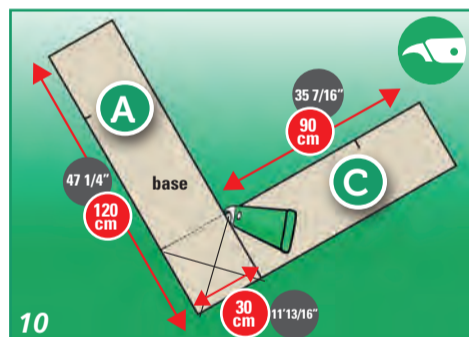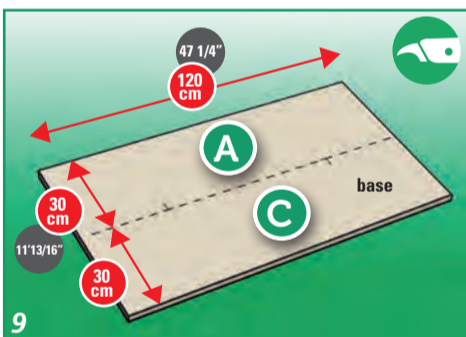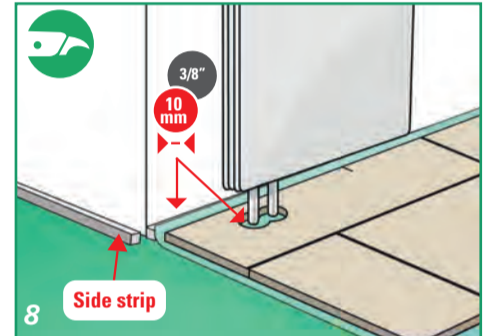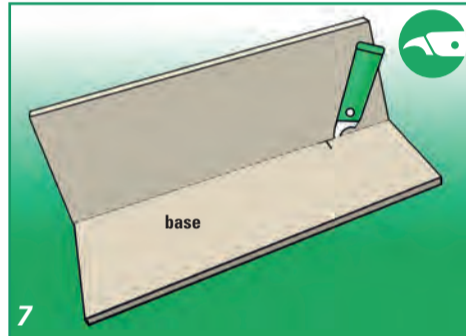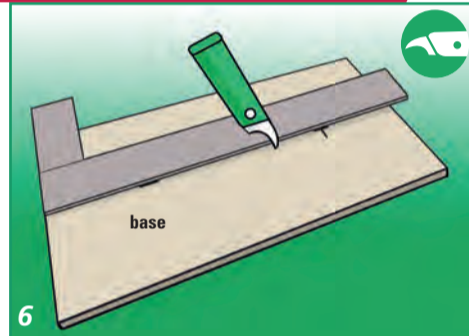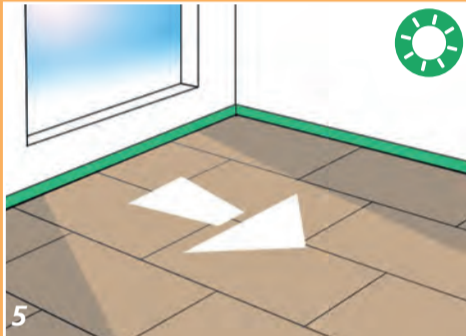

FINISHING

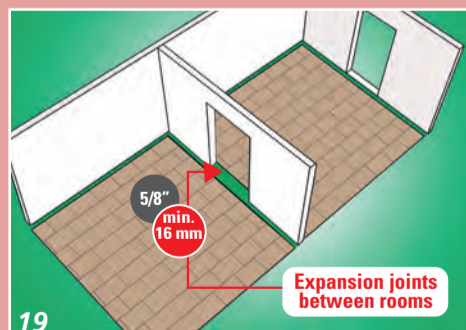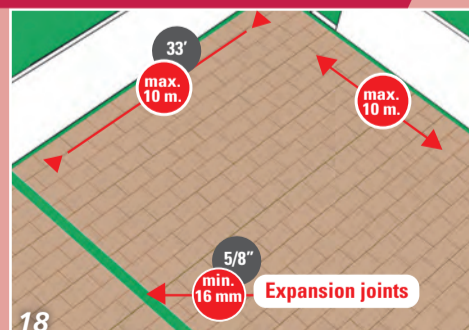

PLACE FLOORCOVERING WITHIN 48 HOURS

