

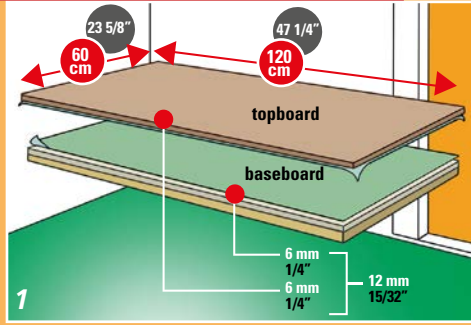
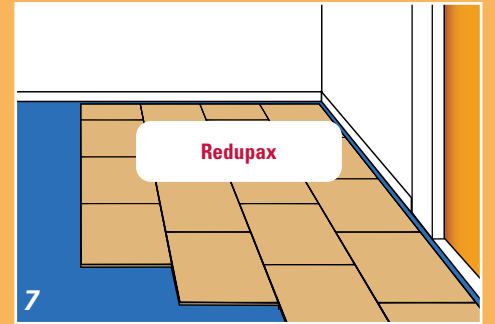
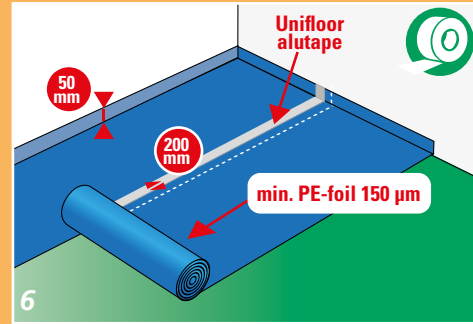
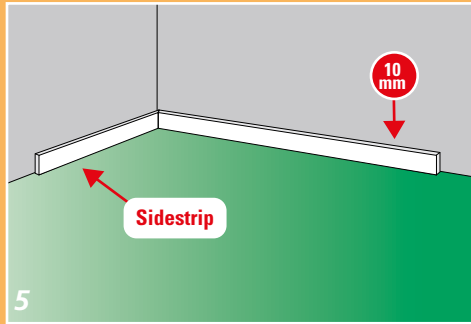
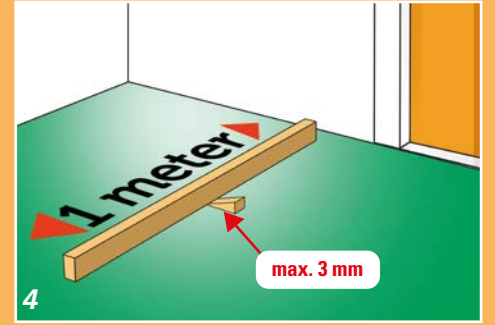


FITTING INSTRUCTIONS


FLOOR PREPARATION

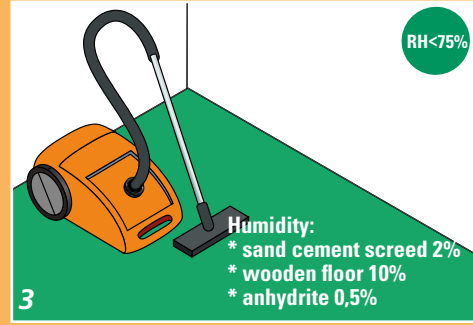


ACCLIMATIZE 24 HOURS IN ADVANCE

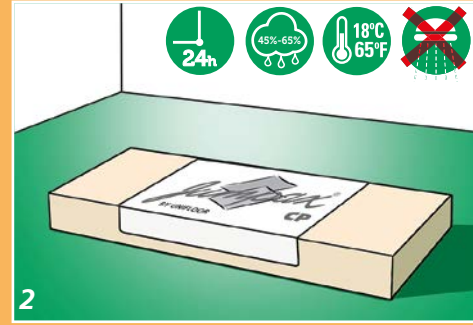


OR

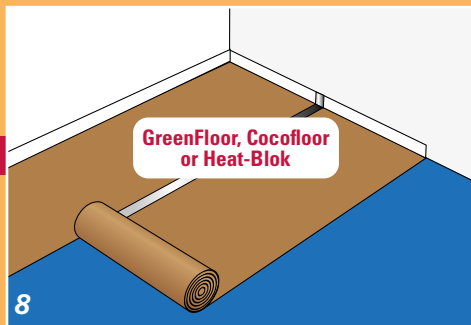


OR

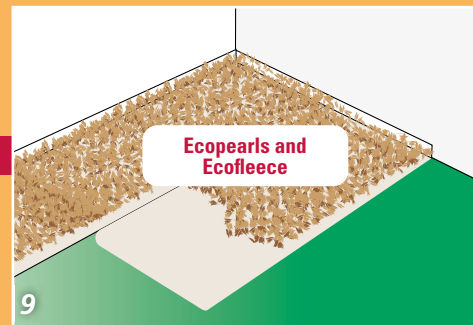













OR

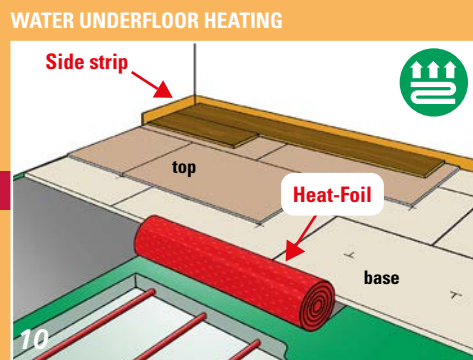



OR

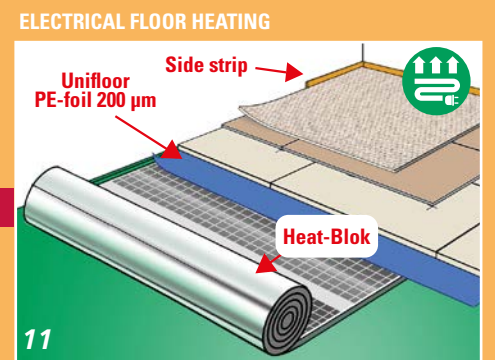

FITTING INSTRUCTIONS

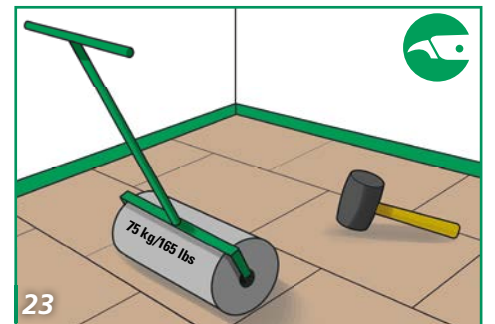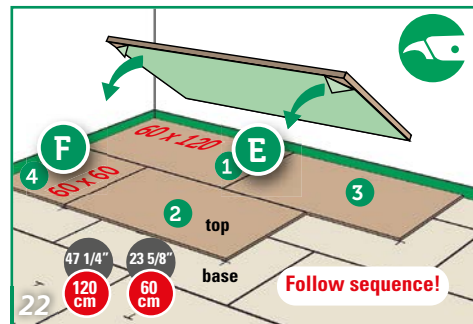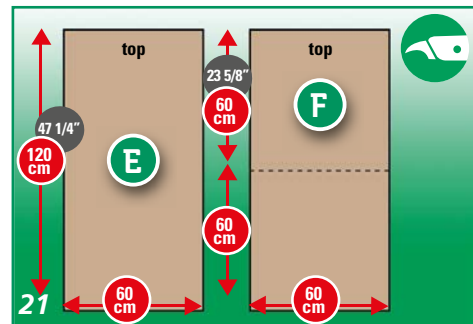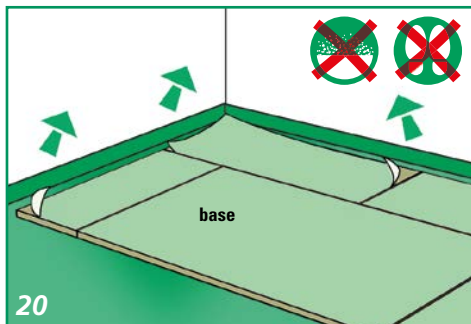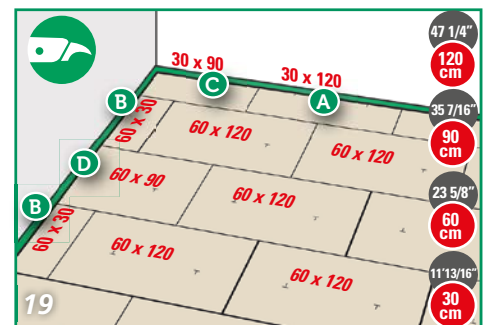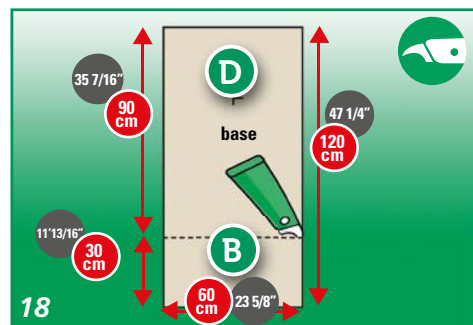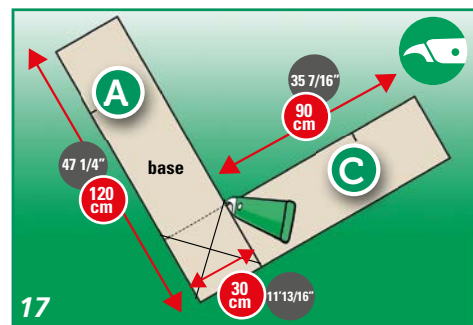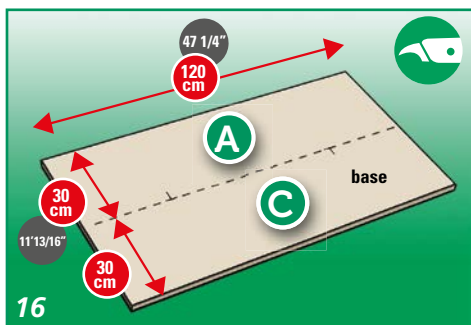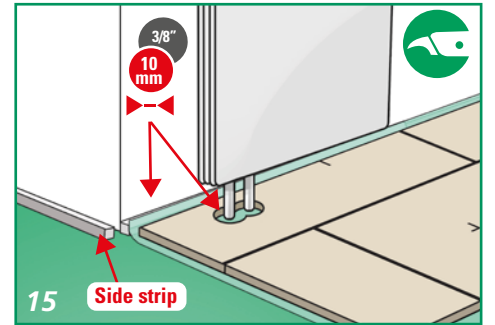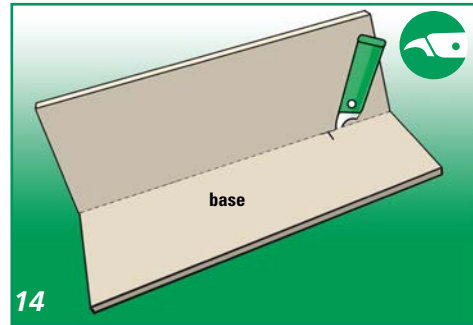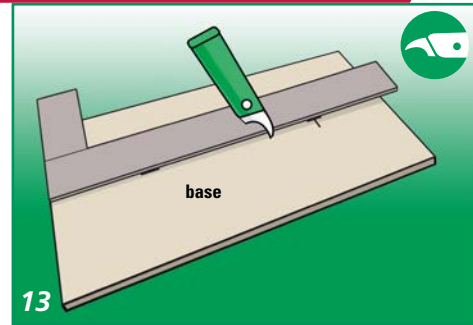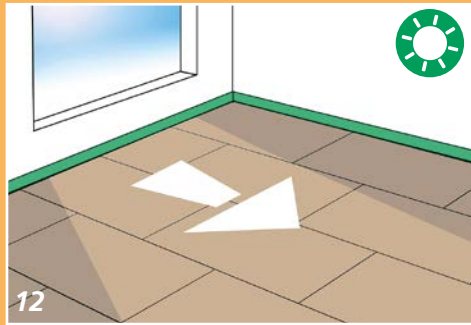

FINISHING

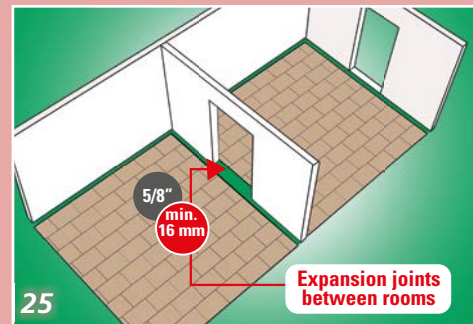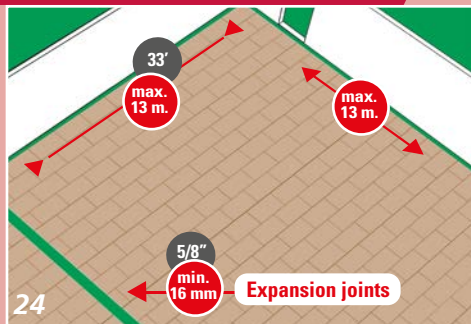

PLACE FLOORCOVERING WITHIN 48 HOURS

