

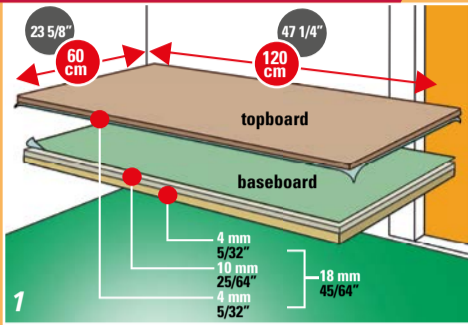
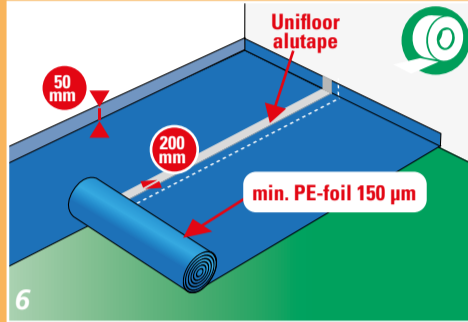
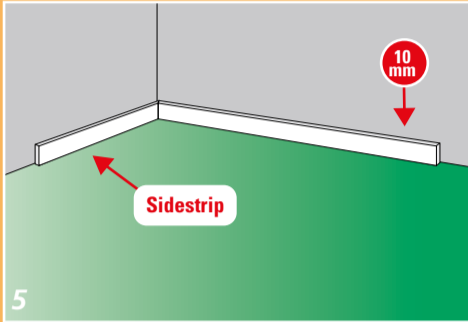
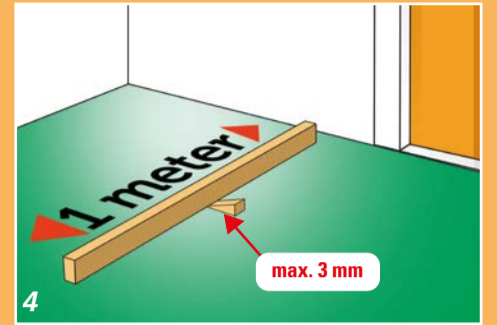


FITTING INSTRUCTIONS













FLOOR PREPARATION

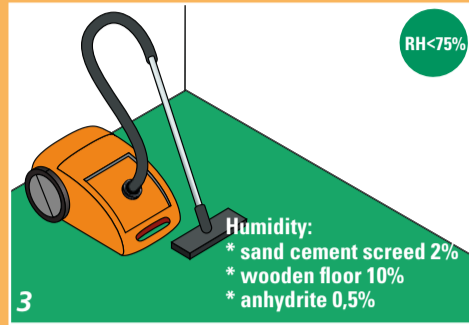



ACCLIMATIZE 24 HOURS IN ADVANCE

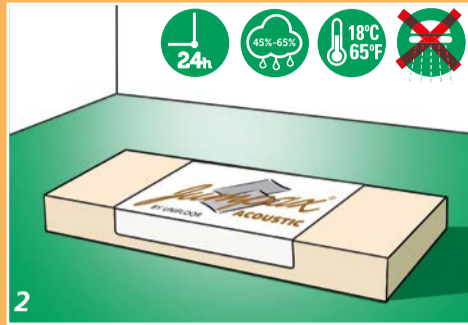

FITTING INSTRUCTIONS

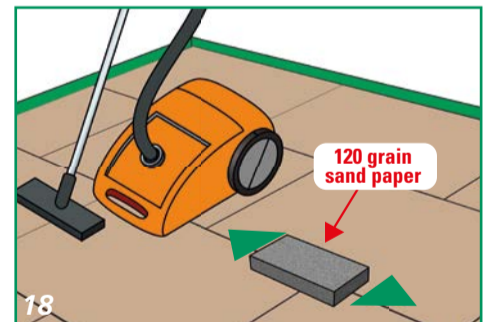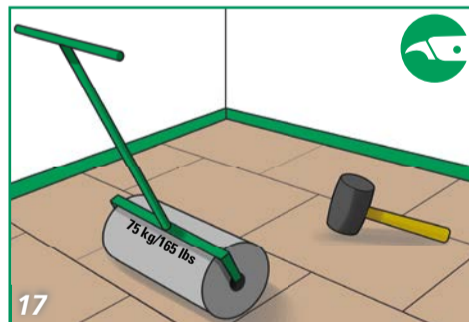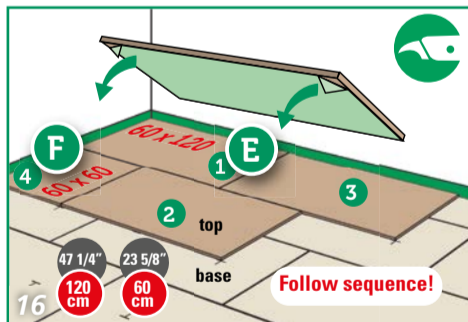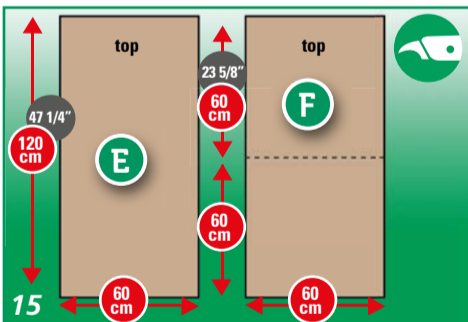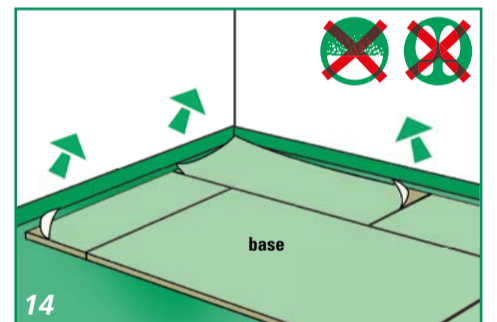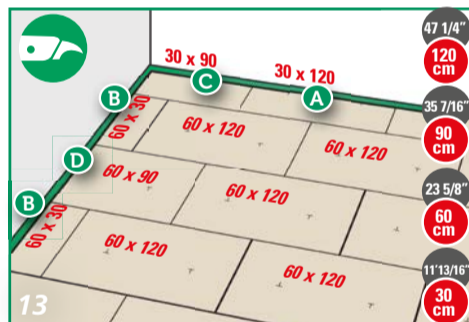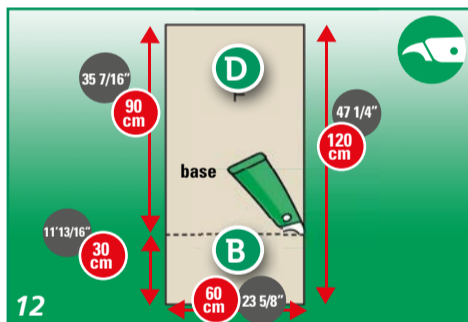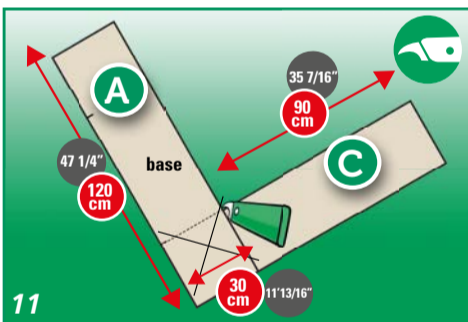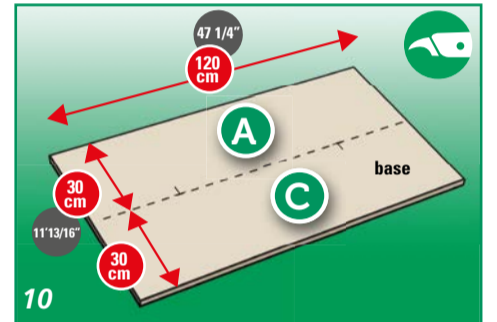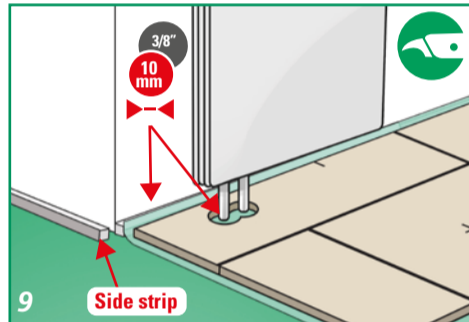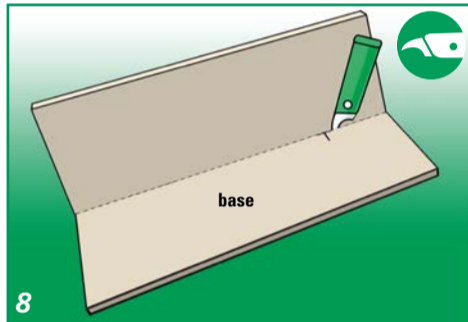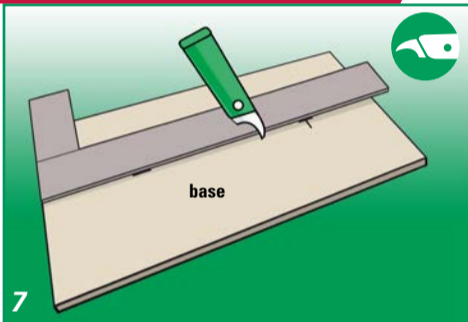

FINISHING

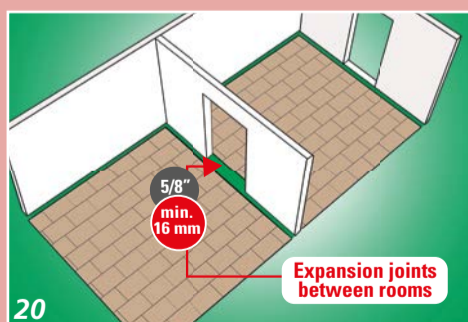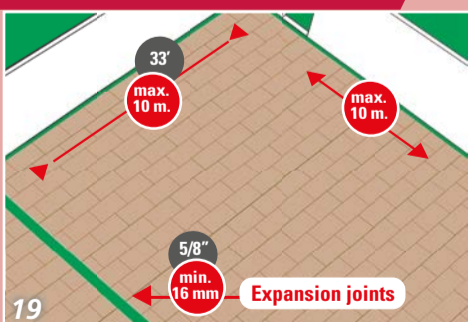

PLACE FLOORCOVERING WITHIN 48 HOURS

